

## MFZ100-W

100W Fresnel Zoom CW/WW LED Stage Light

Item ref: 151.678UK

User Manual

Please read through this manual thoroughly before use, any damage  
Caused by misuse of product will not be covered by warranty.



Ideal for applications where smooth, flat washes are required over shorter distances, this 100W Mini Fresnel stage light is fitted with two super bright and effective cool and warm white LEDs. Providing a controlled, flicker free beam with zoom angle adjustment from 30° to 58° which can also be shaped as required using the pre-fitted barn doors. Internal auto, sound activated and static programs can easily be controlled by the digital control panel on the back of the unit or by 2/6 channel DMX connection if desired. A heavy-duty mounting bracket and twist and lock power connections complete the fixture's professional appearance.

### In the box:

Your MFZ100-W should arrive with you in a single carton in good condition. The carton should contain 1 x main unit, 1x mounting bracket and thumbscrews, 1 x UK IEC mains lead and 1 x user guide.

### Warning:

To prevent risk of fire or electric shock, do not expose the unit to rain or damp environments. In the event of a spillage, disconnect the mains and allow the unit to dry out naturally. Qualified personnel should then check the unit before continuing use.



**Please do not open cover, contains high voltage. This product is not serviceable or repairable by the end user. Please refer to qualified personnel for service and repair.**




## Placement:

- Keep away from damp or dusty environments.
- Ensure adequate airflow around the fixture housings.
- Ensure adequate access to controls and connections.

## Cleaning:

- Use a soft cloth with a neutral detergent to clean the casing as required.
- Use a vacuum cleaner to clear ventilation grilles of any dust or debris build-ups.
- Do not use strong solvents for cleaning the unit.

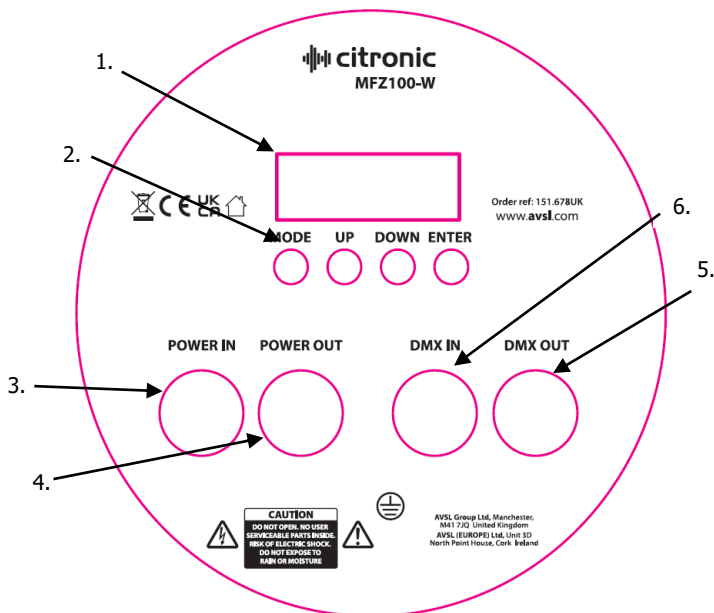

## Rear panel controls:

- |                                 |                                  |
|---------------------------------|----------------------------------|
| 1. LCD display                  | 4. Power output (twist and lock) |
| 2. Manual control buttons       | 5. DMX output                    |
| 3. Power input (twist and lock) | 6. DMX input                     |

## Manual control menu:

Press the **"MENU"** button to enter the settings menu.

Press **"UP"** and **"DOWN"** buttons to navigate through various setting functions.

Press **"ENTER"** button to save the desired setting.

Display	Function	
A001-A512	6-Channel DMX Mode (default)	Refer to 6-Channel DMX table
D001-D512	2-Channel DMX Mode	Refer to 2-Channel DMX table

CJ01-DJ16	Jump to self-propelled mode	
CF01-CF16	Gradient self-propelled mode	
CC01-CC16	Pulse changing self-propelled mode	
S0UD	Sound jump mode	
CL01-CL3	Color selection	
U000-U255	Warm white brightness	
C000-C255	Cold white brightness	
dn 1-4	Dimmer 1	The default dimming curve is a straight line, refer to the dimming curve diagram
	Dimmer 2	
	Dimmer 3	
	Dimmer 4	

### DMX mode:

The MFZ100-W can be controlled by DMX signal, simply connect the DMX signal source to the DMX input on the unit via a balanced XLR lead. Extra fixtures can be controlled by the same DMX signal by looping through the DMX out on the unit (32 units max). To enter DMX mode, select A001 or d001 from the menu and confirm the correct start address by using the "**UP**" and "**DOWN**" buttons and "**ENTER**" to confirm. This unit has 2 or 6 DMX channels as indicated in the tables below:

### 2 Channel (D001-D512):

Channels	Value	Functions
CH1	0-255	Warm white (0-100%)
CH2	0-255	Cool white (0-100%)

### 6 Channel (A001-A512):

Channels	Value	Functions
CH1	0-255	<b>Master dimmer</b> Low to high (0-100%)
CH2	0-255	<b>Warm White</b> (0-100%)
CH3	0-255	<b>Cool white</b> (0-100%)
CH4	0-10 11-255	<b>Strobe</b> No Function Strobe with increasing speed
CH5	0-49 50-99 100-149 150-199 200-255	<b>Macro</b> No Function Jump change Gradient Color pulse transformation Sound

CH6	0-255	<b>Macro function speed</b> Macro function speed changes from slow to fast
-----	-------	---

**Specifications:**

<b>Power</b>	100 - 240Vac, 50/60Hz
<b>Power consumption</b>	120W
<b>LED power</b>	50W CW and 50W WW COB LEDs
<b>Effective distance</b>	Up to 5m
<b>Beam angle</b>	30° to 58°
<b>Modes</b>	Auto, Sound, DMX, Master/Slave
<b>DMX channels</b>	2 or 6CH
<b>Connections</b>	Power in/out (twist and lock), DMX in/out (3pin XLR)
<b>Dimensions</b>	463 x 340 x 260mm
<b>Weight</b>	5.4kg

**Troubleshooting:**

<b>No power (mains)</b>	Check mains lead and fuse (if fuse continually blows, refer to your dealer)
	Check the unit is charged and the power switch is in the on position
<b>No light output</b>	Check control panel mode settings
	Check DMX settings from controller (dimmer levels, blackout etc.)
<b>Unresponsive to DMX</b>	Check that unit is in DMX mode and ensure DMX address remains lit to confirm receiving DMX signal
	Check DMX controller is not set to blackout
	Check DMX controller is on correct fixture/page
	Check master dimmer value
	Check correct DMX address is set
	Check DMX connection and leads
<b>Overheating/cutting out</b>	Ensure adequate ventilation and unit is not too close to a heat source



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

**Errors and omissions excepted.**

Copyright© 2025 AVSL Group Ltd, Unit 2 Bridgewater Park,  
Taylor Road, Trafford Park, Manchester. M41 7JQ.

AVSL (Europe) Ltd, Unit 3D North Point House,  
North Point Bus. Park, New Mallow Road, Cork, Ireland.